

# Indoor/Outdoor Proximity Reader and Keypad CR-R885-BL

## Indoor/Outdoor Proximity Reader CR-R880-BL

### Addendum

Please note the new wire functions for the Proximity Reader's **6ft. cable** only:

**Shield** = Shield

**Blue** = Beeper

**Black** = Ground

**Green** = Data "0"

**White** = Data "1"

**Yellow** = Green LED

**Orange** = Red LED

**Red** = +12Vdc

**Grey** = Tamper

**Grey** = Tamper

**P**  **R**  **D O X**<sup>®</sup>  
**S E C U R I T Y S Y S T E M S**  
780 Industriel Blvd., Saint-Eustache (Quebec) J7R 5V3 CANADA  
Tel.: (450)491-7555 Fax: (450) 491-2313

[www.paradox.ca](http://www.paradox.ca)

PRINTED IN CANADA 06/2005

CR88XBL-EA02