

VDMP3 Plug-In Voice Module V1.2

VDMP3-EI08

P ▲ R ▲ D O X™

Description

The VDMP3 provides a voice-assisted link with the control panel and can be programmed to call one or more telephone numbers in the event of an alarm. You can also call the VDMP3 from an outside line, enabling you to arm or disarm the system as well as activate PGMs. The VDMP3 essentially turns any outside telephone into a keypad.

Features


- Compatible with Spectra SP (V2.10 or higher), MG Series (V2.10 or higher), EVO control panels and PCS200 GPRS/GSM module
- Record a "Voice ID" to identify the installation site
- Dial up to 8 telephone numbers to report a burglar, panic or fire alarm using prerecorded messages
- Arm/disarm the system remotely via telephone
- Control PGMs and toggle utility keys remotely via telephone
- Voice-guided menu
- In-field upgradable
- Connects directly onto the control panel

Specifications

Compatibility	EVO Series MG Series V2.10 or higher Spectra SP Series V2.10 or higher
Power Consumption	35mA
Audio	18,345Hz
Dimensions	2.5 x 2.5 in. (6.4 x 6.4 cm)

Overview

1. Mounting pin hole
2. Feedback LEDs
3. Expansion port

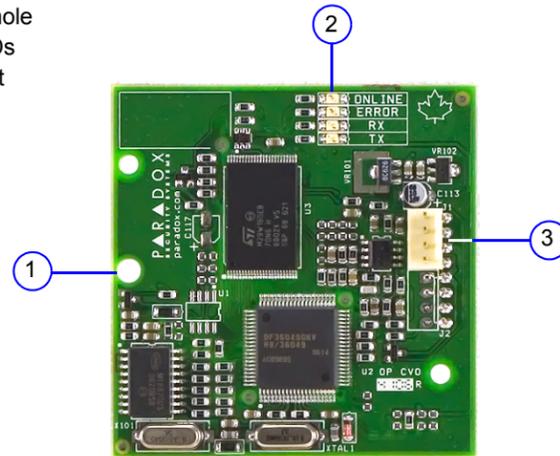


Installation

The VDMP3 is installed directly onto the control panel's DIALER and EBUS connectors as shown.

IMPORTANT: To comply to EN 50131 requirements, unit must be installed in an approved tamper enclosure.

To Install the VDMP3:

1. Power down the control panel.
2. Attach support pin to EVO panel and VDMP3.
3. For serial / RS485 conversion, connect the CVT485 to the expansion port.
4. Connect VDMP3 to DIALER and EBUS.
5. Power up the control panel after the VDMP3 has been successfully connected.

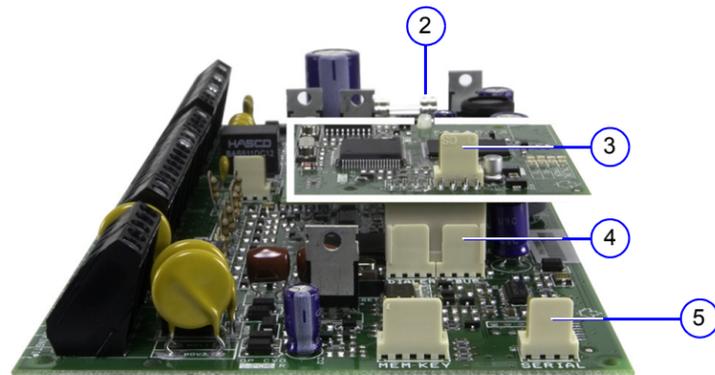

Programming

Steps	EVO	MG/SP	Description
Programming Mode	N/A	N/A	Enter programming mode: EVO: Press and hold [0] + [INSTALLER CODE] MG/SP: Press [ENTER] + [INSTALLER CODE]
Enable Functions	[3090]	[703]	Enable voice reporting and/or arm/disarm function: EVO: [1] Arm/disarm (default ON) [2] Voice reporting (default ON) MG/SP: [8] Arm/disarm (default ON) Voice reporting is always ON
Telephone Numbers	[3091] to [3098]	Master Quick Menu	Program telephone numbers which will be called in the event of an alarm. Telephone numbers should be programmed in priority sequence as the VDMP3 will start with telephone number 1. For extra key functions, see "Special Telephone Keys". EVO: [3091] Tel. # 1 [3095] Tel. # 5 [3092] Tel. # 2 [3096] Tel. # 6 [3093] Tel. # 3 [3097] Tel. # 7 [3094] Tel. # 4 [3098] Tel. # 8 MG/SP: Programmed through the Master Quick Menu (see the MG/SP User Guide).
Enable Numbers	[3133] to [3833]	N/A	Choose which telephone numbers will be enabled for each partition in your system: (Default: Telephone number 1 is enabled for all partitions.) [3133] Partition 1 [1] to [8] [3533] Partition 5 [1] to [8] [3233] Partition 2 [1] to [8] [3633] Partition 6 [1] to [8] [3333] Partition 3 [1] to [8] [3733] Partition 7 [1] to [8] [3433] Partition 4 [1] to [8] [3833] Partition 8 [1] to [8]
Answering Machine Override	[3052]	[902]	To override an answering machine or service, the user must call the VDMP3, hang up, and then call back within the time value programmed in this section. The VDMP3 then overrides the answering machine or service by answering the line on the first ring. 000 to 225 seconds EVO: Default 008 x 4 = 32 seconds MG/SP: Default 030 = 30 seconds <i>NOTE: Changing these values will also affect PC communication via Babyware software.</i>
Enable Features (PGM)	[3087]	N/A	Features in this section correspond to utility key PGMs in the control panel. For more information, see "Feature Activation (PGMs)". EVO: Options [1] to [8] represent features 1 to 8 (default: OFF) MG/SP: [1] to [8] always enabled
Message Delay	[3088]	[836]	After the VDMP3 dials a phone number, it waits the delay period programmed in this section before playing the voice message. 000 to 127 seconds (default 003)
Message Repetitions	[3089]	[837]	Set the number of times the VDMP3 will play the voice message. 000 to 008 repetitions (default 008)
Delay Before Next Number	[3054]	[832]	Set the delay before the VDMP3 attempts to dial the next number on the list. 000 to 255 seconds (default 020) <i>NOTE: Changing these values will also affect regular reporting to monitoring station.</i>
Ring Counter	[3051]	[901]	Set the number of rings the VDMP3 will wait before the call is answered. 000 to 008 rings (default 008) <i>NOTE: Changing these values will also affect PC communication via Babyware software.</i>
Maximum Dialing Attempts	[3056]	[831]	Set the number of times the VDMP3 will attempt to dial each telephone number. 000 to 255 seconds (default 008) <i>NOTE: Changing these values will also affect regular reporting to monitoring station.</i>
Activate AC/Battery Reporting	[3090] opt. 3	[804] opt. 8	Activate panel low AC/battery reports. Default: OFF

